

## Parts identification

### ■ Turntable (SP-15)

① Turntable platter

② Turntable mat

③ Power switch/pitch lock knob

④ Speed select buttons

⑤ Start/stop button

⑥ Digital speed indicator

⑦ Pitch control button (-)

⑧ Clear button

⑨ Pitch control button (+)

⑩ Center spindle

⑪ Digital pitch indicator

### ■ Turntable base (SH-15B1)

① Hinge
































④ Dust cover

② Turntable base


⑤ Arm panel

③ Leg/insulator × 4


**"Warning: To prevent fire or shock hazard,  
do not expose this appliance to rain or moisture."**

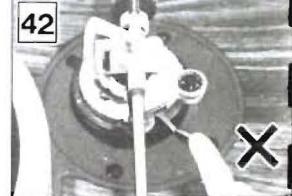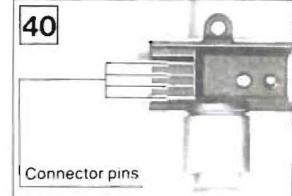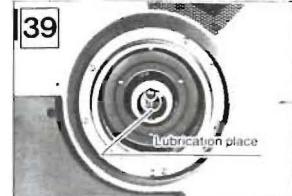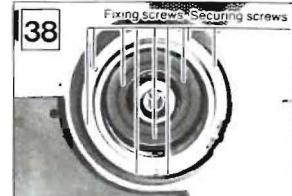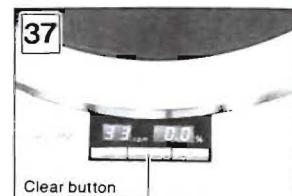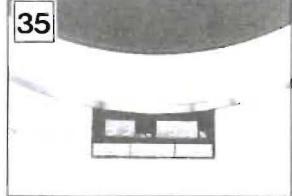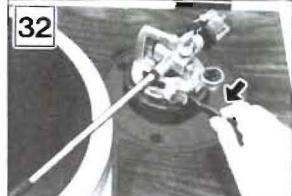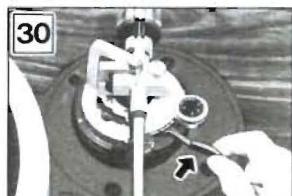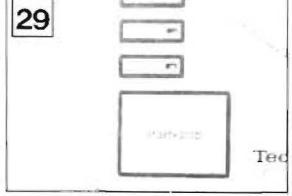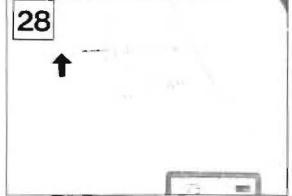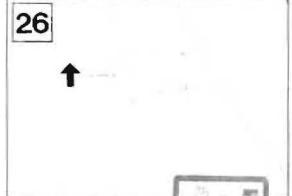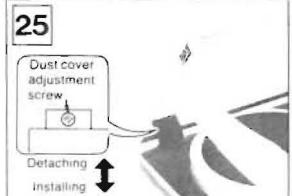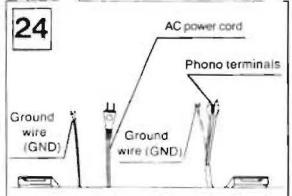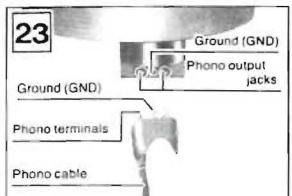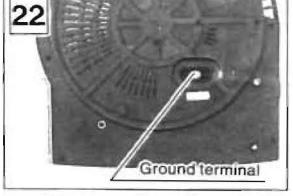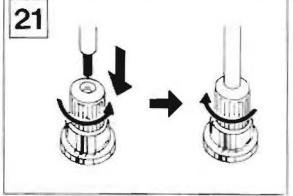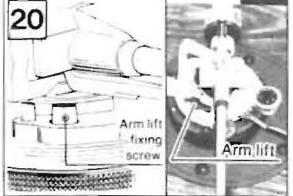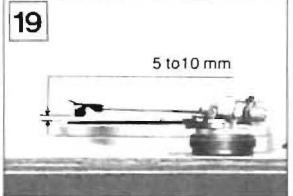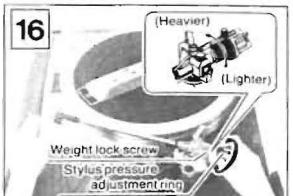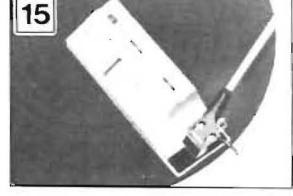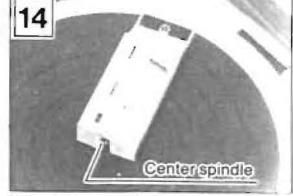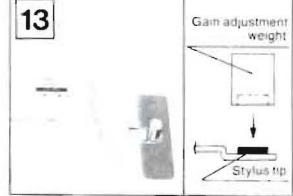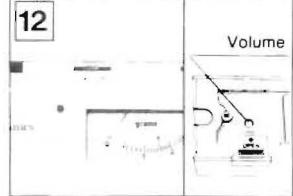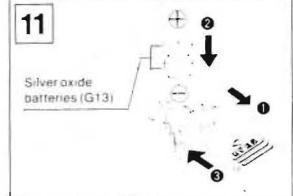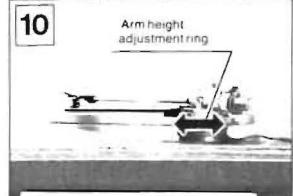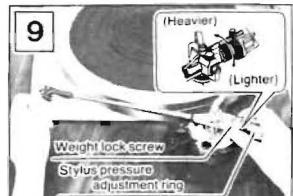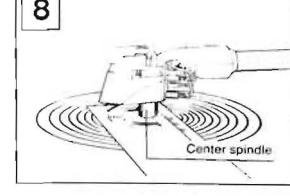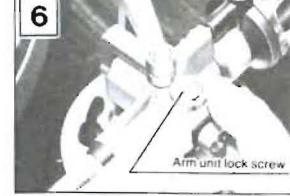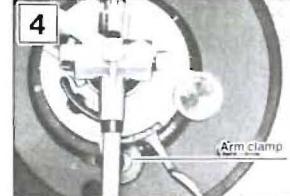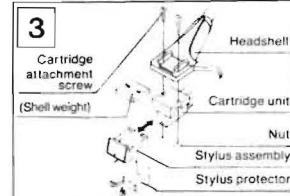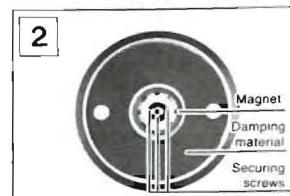

■ System tonearm (EPA-500)  
Arm base/EPA-B500

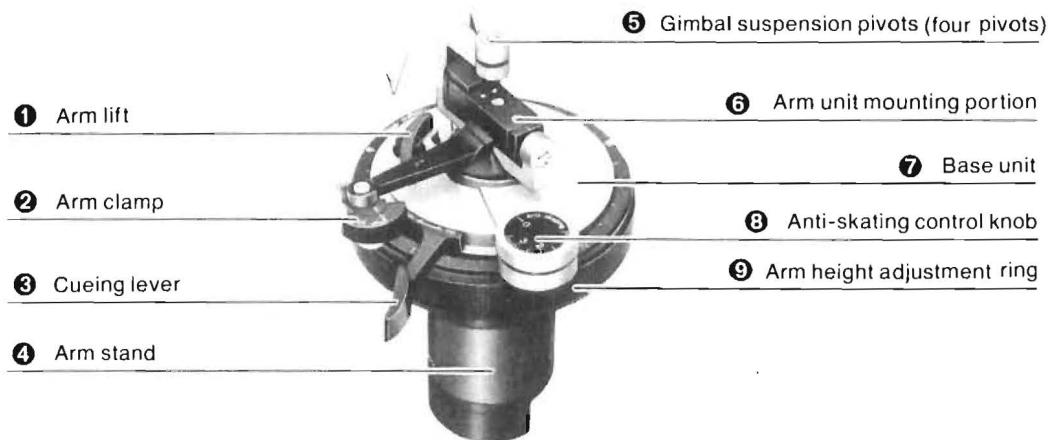

■ Arm unit/EPA-A501H

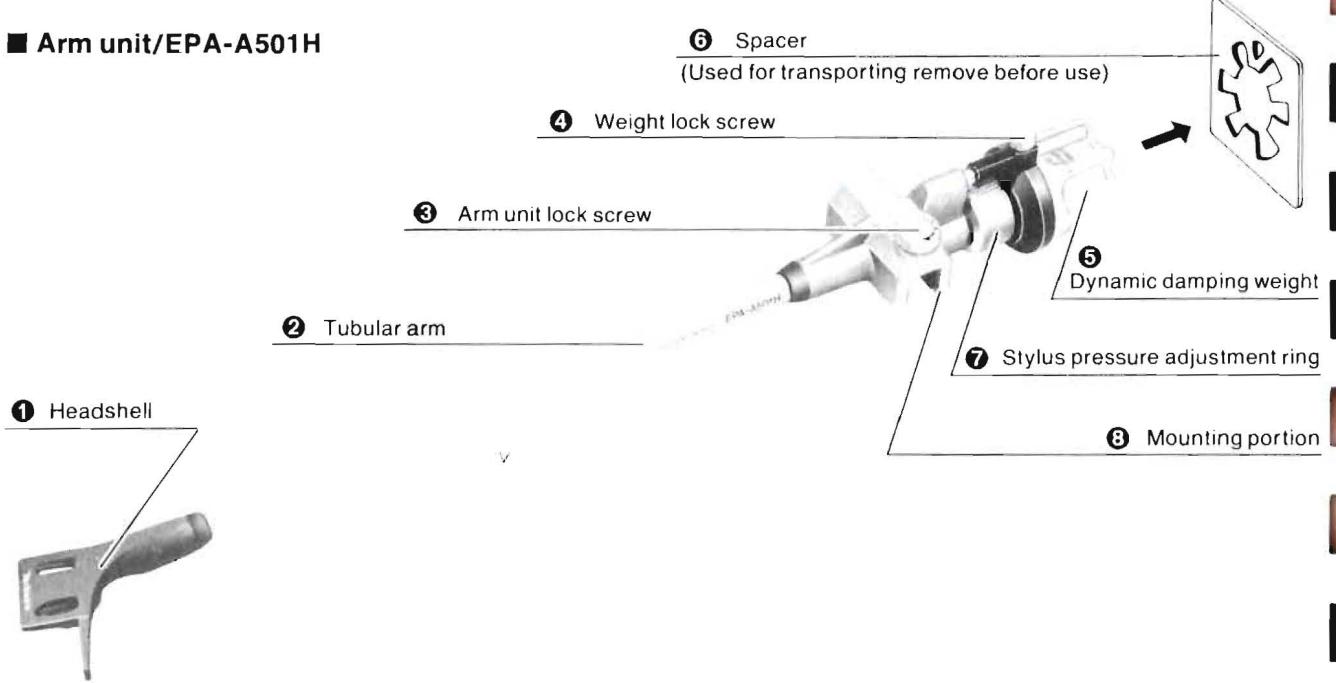

■ Stylus pressure gauge/SH-50P1

